

Proton X50 Navigation Map Update Method (For End User)

TECH

Updated as of: 12th April 2022

Content

1. X50 Navigation map update method	2
1.1 Online routine map data update	2



1. X50 Navigation map update method

Navigation of X50 map update method include :

- Online incremental map data update

1.1 Online routine map data update

Precondition :


If the system detected obsolete offline map data in the IHU, the software would compare the map data version when there is a stable network connection. If a newer version is detected, it will automatically download new map data from the cloud in the background and update the old map data of the IHU.

Update step:

Step 1:

Upon entering the navigation, the system will automatically compare the map data version. If the cloud has a different version than of the IHU, the background map data download and update will start.

If “New navigation map available” popup appears, this means that the update is successful.

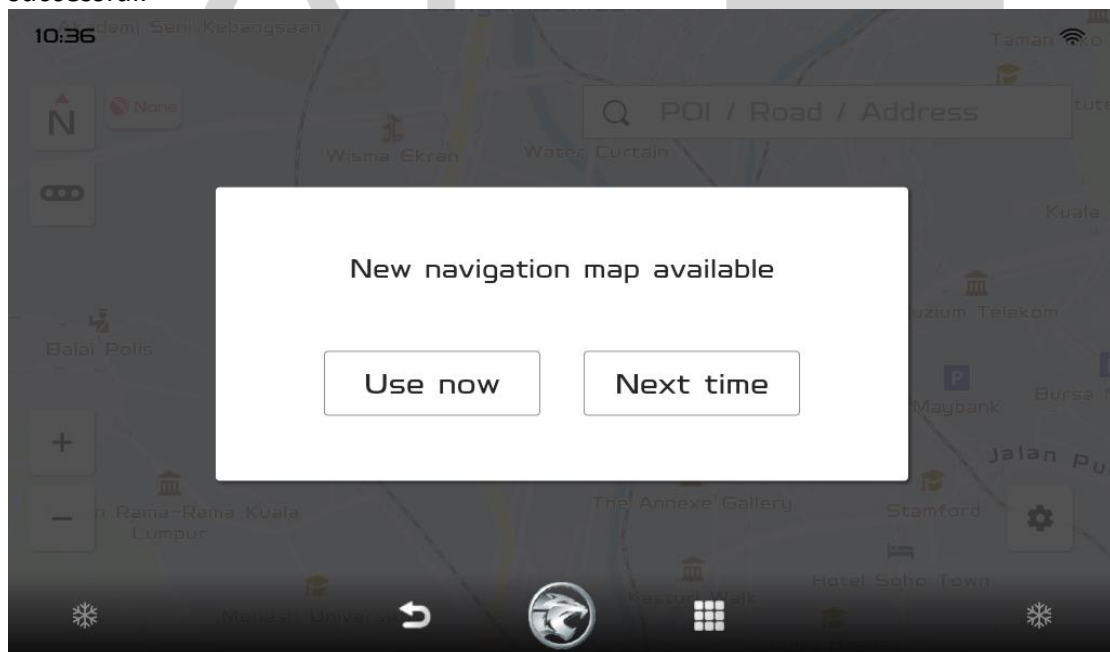

Note: Updating process will be done in the background and current navigation will function normally.


If the update process is interrupted, the system will resume update once there is a stable network connection.

Step 2:


Click “Use Now” to start using the updated navigation version. You may confirm the map version from the navigation settings. You can enter the navigation activation page.

For details, please refer to the description of activation in the previous navigation manual.

I.e., Before map update the map version is: N.P.B1.21.00.03.00

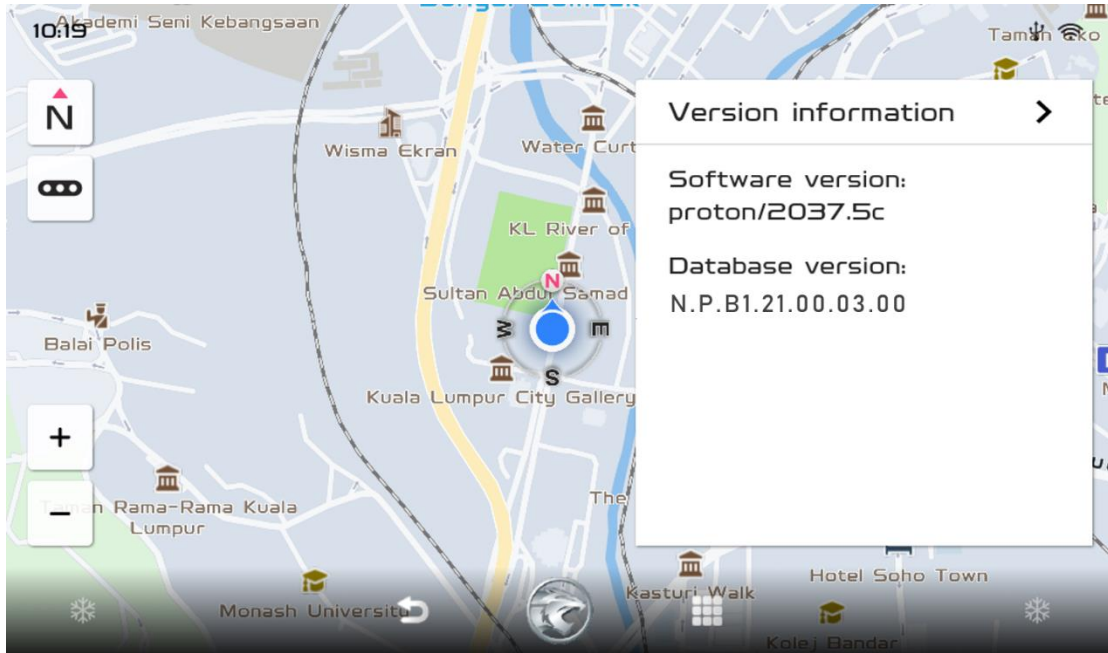

After update: Version N.P.B1.22.00.02.00

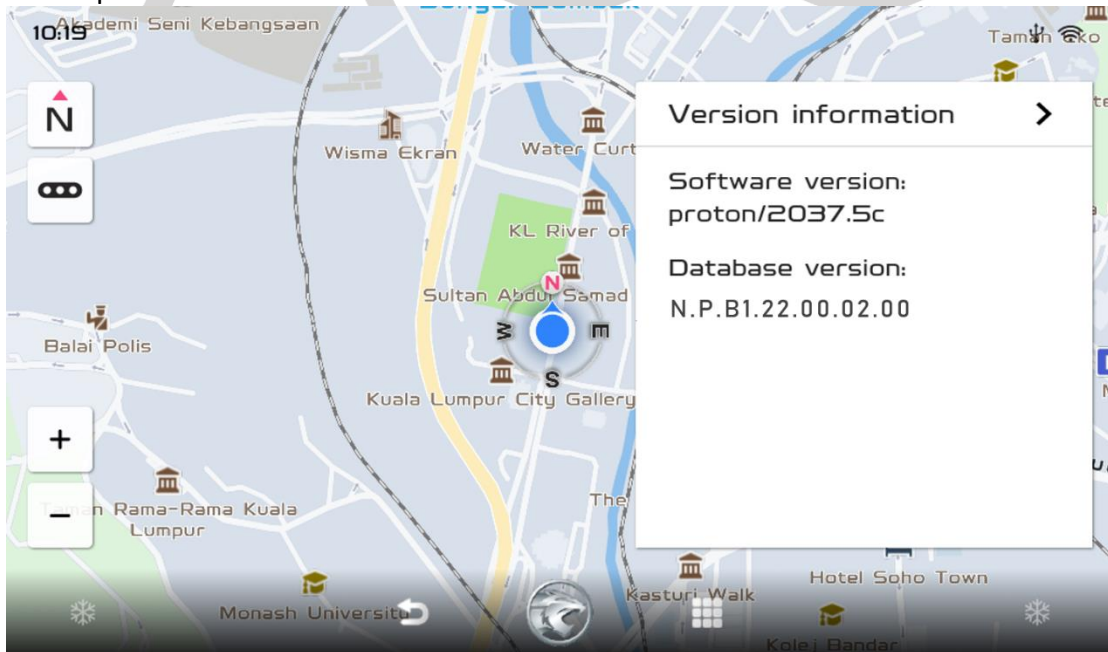

Step 3:

By selecting “Next time”, navigation will presume with the old map data. Updated map data will start when new navigation is entered.